


1202 KSS 马鞍型夹线套 LOCKING WIRE SADDLE

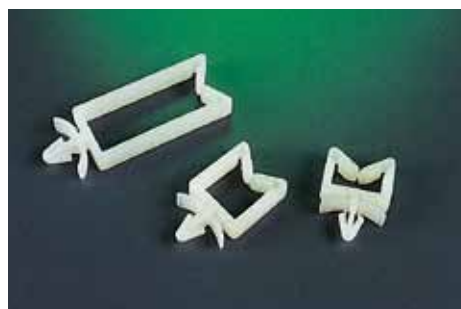

无卤素 环保


单位：mm



型 号 Item No.	尺 寸 Dimension				适用PC板		包 装 Packing
	W1	H	H1	H2	钻孔 M1	板厚 T1	
KWS-0N	11.0	12.7	9.2	4.0	4.8	2.0	100pcs
KWS-1N	11.0	17.9	14.8	9.6	4.8	2.0	
KWS-2N	11.3	26.7	23.4	18.4	4.8	2.0	
KWS-3N	11.0	34.8	31.3	26.2	4.8	2.0	
KWS-1114	10.7	21.2	17.8	13.7	4.8	2.4	

材质：UL合格之 NYLON 66 (本色)，防火等级 94V-2。

用法：基板钻孔 4.8mm，先把夹线套固定，再将欲固定之电线放入套中，即可将电线牢牢扣住，可作任何方向与角度的固定电线之用。

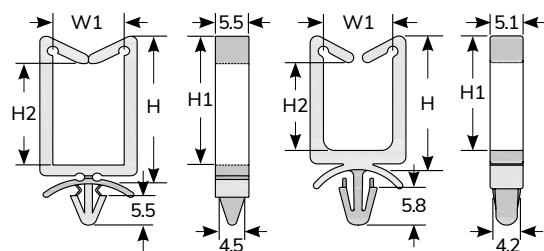

KWS-0N,1N,2N,3N

KWS-1114

1202 KSS 马鞍型夹线套 LOCKING WIRE SADDL



无卤素 环保


单位：mm




型 号 Item No.	尺 寸 Dimension			适用PC板		包 装 Packing
	W	W1	H2	钻孔 M1	板厚 T1	
KWS-0506	9.0	5.0	5.4	4.8	3.0	100pcs
KWS-1106	13.0	10.5	5.4	4.8	1.6	
KWS-1110	14.4	10.9	9.8	如图	2.2	
KWS-1308	17.2	12.7	8.5	5.8	1.6	
KWS-1310	18.8	13.0	9.9	如图		
KWS-2314	28.3	22.9	13.6	4.8	3.4	

材质：UL合格之 NYLON 66 (本色)，防火等级 94V-2。


用法：先将基板钻孔，再把夹线套固定，再将欲固定之电线放入套中，即可将电线牢牢扣住，可作任何方向与角度的固定电线之用。

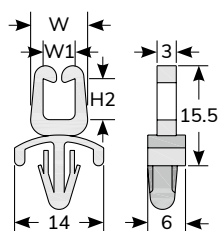

KWS-0506

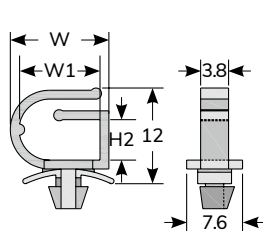


KWS-1106

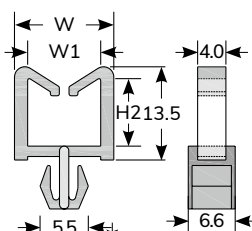


KWS-1110

基板钻孔

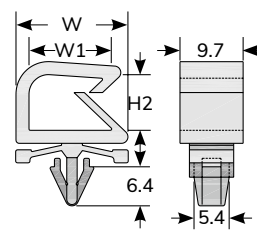


KWS-1308

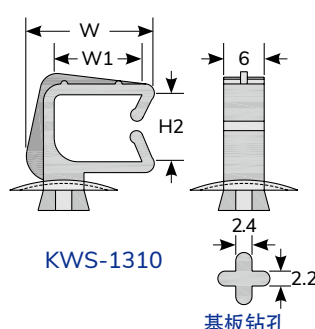

KWS-1310

基板钻孔

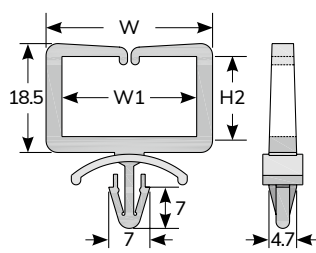

KWS-2314